

L-force Drives



Montageanleitung


Mounting Instructions

Instructions de montage

Instrucciones para el montaje

Istruzioni per il montaggio

EWS

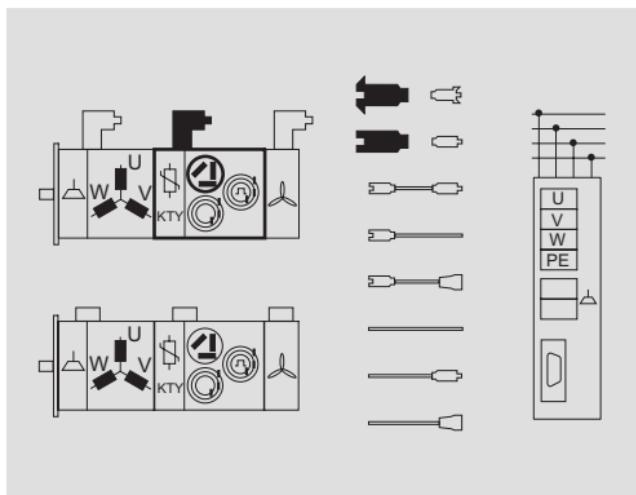

EWS0006, EWS1006

Systemstecker für Resolveranschluss (Buchse)

System connector for resolver connection (female)

Connecteur système pour raccordement résolveur (fiche femelle)

Conector de sistema para conexión de resolver (hembra)

Connetore di sistema per collegamento resolver (femmina)

Lenze



Lesen Sie die Dokumentationen zum Grundgerät und zum Motor und das Handbuch "Systemleitungen und Systemstecker", bevor Sie mit den Arbeiten beginnen.



Before your start working, please read the documentation for the basic unit and the motor as well as the manual "System Cables and System Connectors".




Lire la documentation relative à l'appareil de base et au moteur ainsi que le manuel "Câbles système et connecteurs système" avant toute manipulation de l'équipement.



Antes de empezar con el trabajo, lea detenidamente la documentación del equipo básico y del motor, así como el manual "Cables y conectores de sistema".




Prima di utilizzare l'apparecchiatura, leggere la documentazione relativa al dispositivo base e al motore, nonché il manuale "Cavi e connettori di sistema".

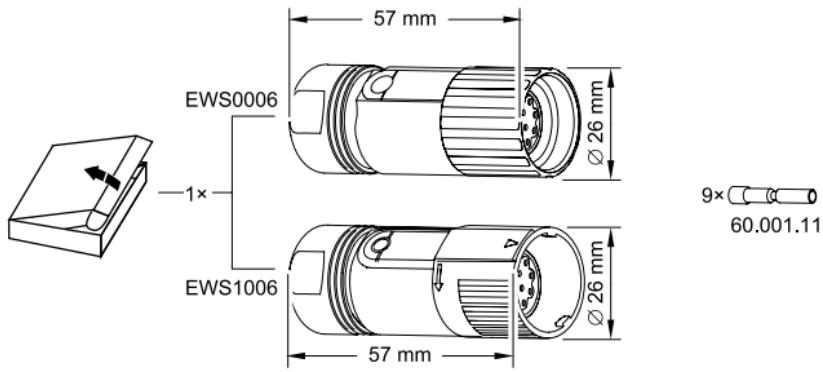


ews006_02

C0.101.00
(Intercontec)

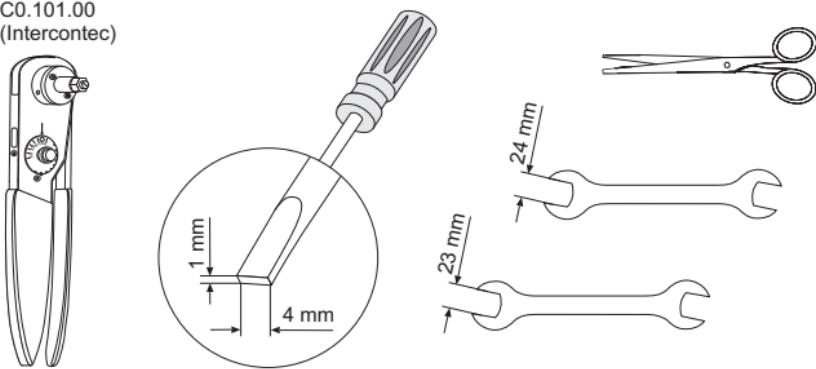


ews006_09

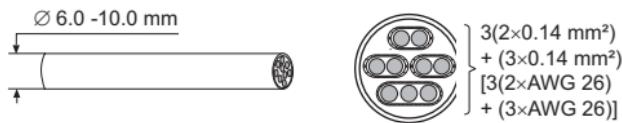


ews006_10







1

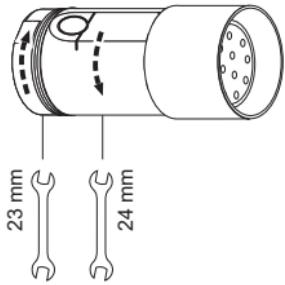

2

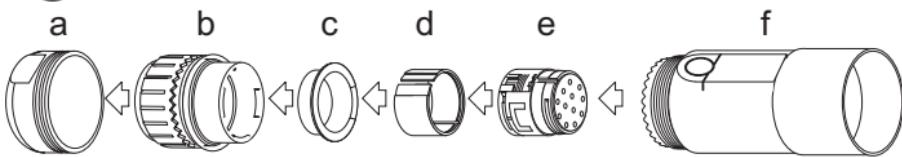


ews006_03

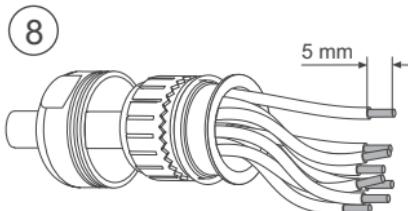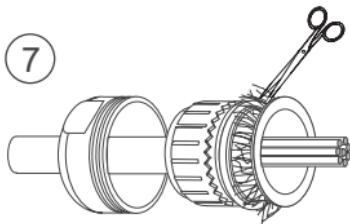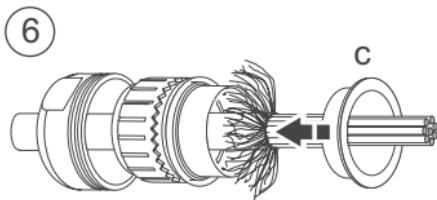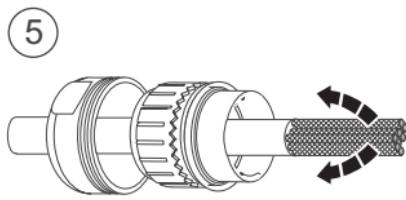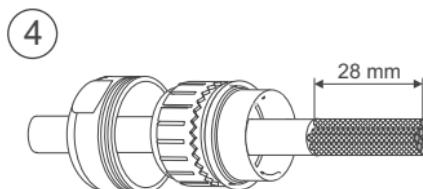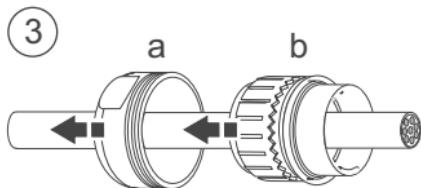


ews006_04


9

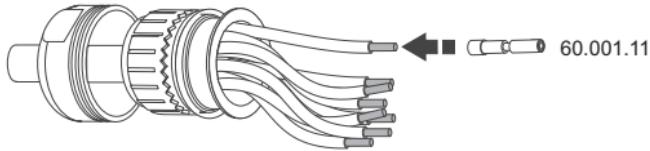

10




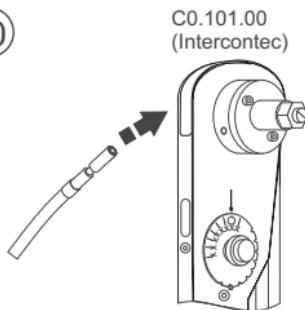


ews006_05

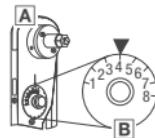


mm ²	AWG		C0.101.00	
0.14	26	60.001.11	A B	4

11

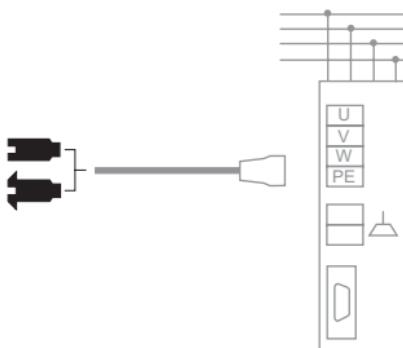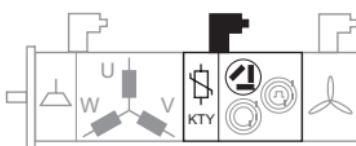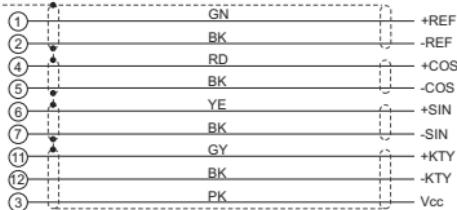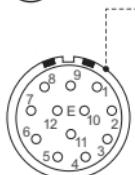


ews006_06


⑫

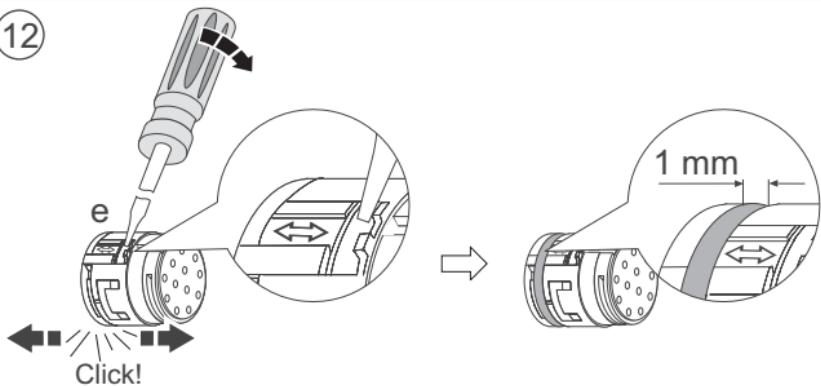

⑬

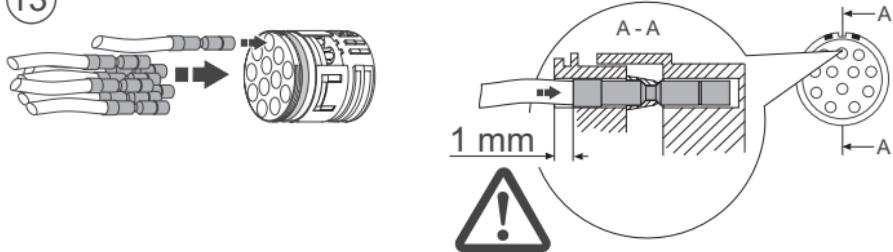


⑭

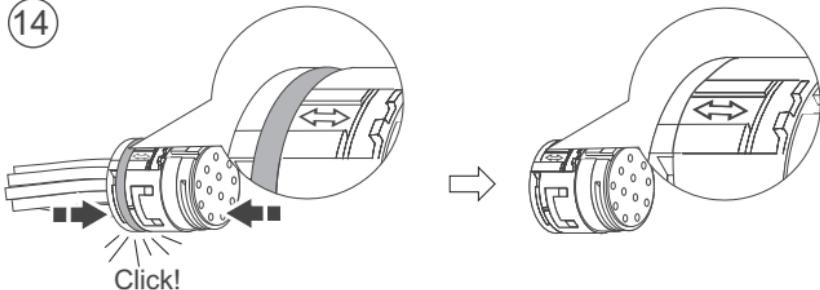


ews006_07


15

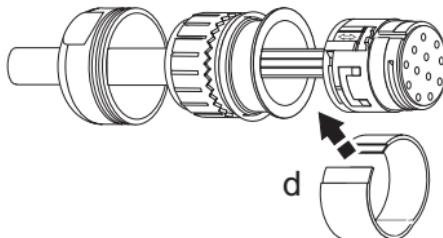


16

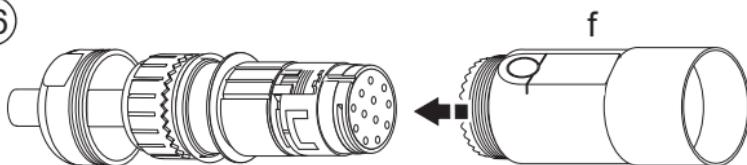

17

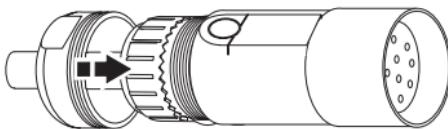

18

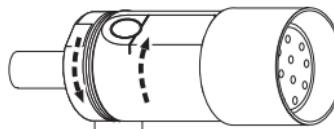


23 mm 24 mm

5 ... 5.5 Nm
(44.3 ... 48.7 lb-in)

7 ... 7.5 Nm
(62.0 ... 66.4 lb-in)

ews006_08

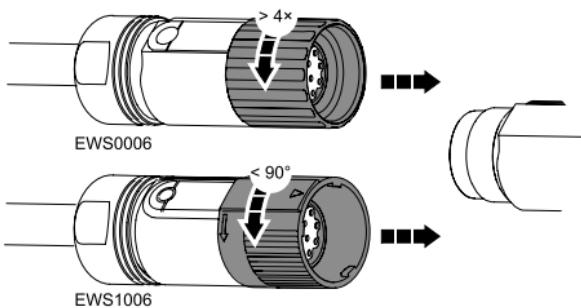

ews006_11

© 07/2010



Lenze Automation GmbH
Hans-Lenze-Str. 1
D-31855 Aerzen
Germany



+49 (0)51 54 / 82-0



+49 (0)51 54 / 82 - 28 00



Lenze@Lenze.de



www.Lenze.com

Service Lenze Service GmbH
Breslauer Straße 3
D-32699 Extertal
Germany



00 80 00 / 24 4 68 77 (24 h helpline)



+49 (0)51 54 / 82-11 12



Service@Lenze.de